

POWERTECH POST DRIVER

Model: PPD-80-GX35



CE

User Manual

Thank you for purchasing the Powertech Post Driver and welcome to the Service and Operators manual. Please be sure this manual is read and understood completely before operating or carrying out any maintenance, failure to do so may result in personal injury or mechanical damage to the unit. If you need further information or any clarification on anything described in this manual, please contact your local dealer immediately.

Contents

| | |
|---|----|
| 1. Name of Main Parts..... | 3 |
| 2. Description of Safe Operation..... | 4 |
| 3. Main Use and Function..... | 4 |
| 4. Preparation before Use..... | 5 |
| 5. Starting..... | 6 |
| 6. Operation..... | 7 |
| 7. Turning off the Machine..... | 8 |
| 8. Technical Maintenance..... | 8 |
| 9. Failure Analysis and Its Eliminating Methods..... | 11 |
| 10. Key Product Data..... | 12 |
| 11. Declaration of Conformity..... | 12 |
| 12. Warranty..... | 12 |
| 13. Maintenance Cycle..... | 13 |
| 14. Parts List and Exploded View of PPD-80 Post Driver..... | 14 |



1. Name of Main Parts

| No. | Name of Part | No. | Name of Part | No. | Name of Part |
|-----|-----------------|-----|----------------|-----|----------------|
| 1 | Air Filter | 2 | Fuel Tank Cap | 3 | Fuel Tank |
| 4 | Throttle Button | 5 | Throttle Cable | 6 | Damping spring |
| 7 | Starter | 8 | Muffler | 9 | Oil filler cap |
| 10 | Grease Cap | 11 | Grip | 12 | Front Placket |
| 13 | 82mm adapter | 14 | Stop Switch | 15 | Gear cover |
| 16 | 73mm sleeve | 17 | 55mm sleeve | 18 | 45mm sleeve |
| 19 | Retainer | | | | |

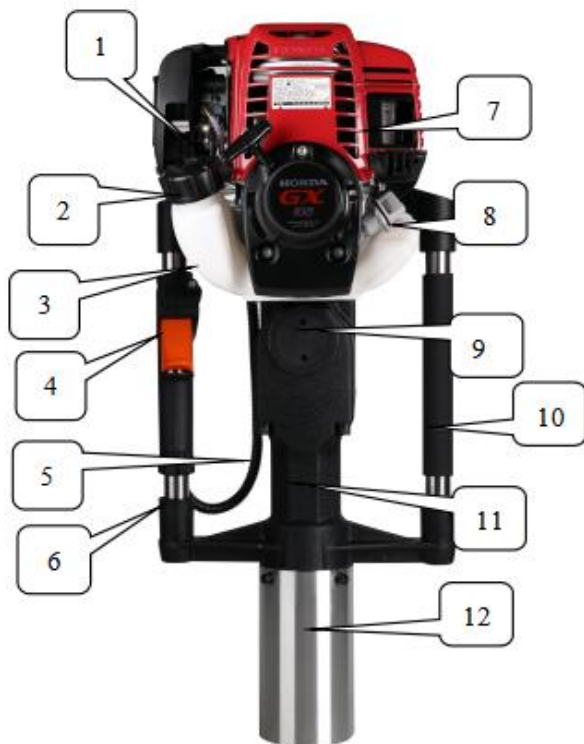


Fig. 1

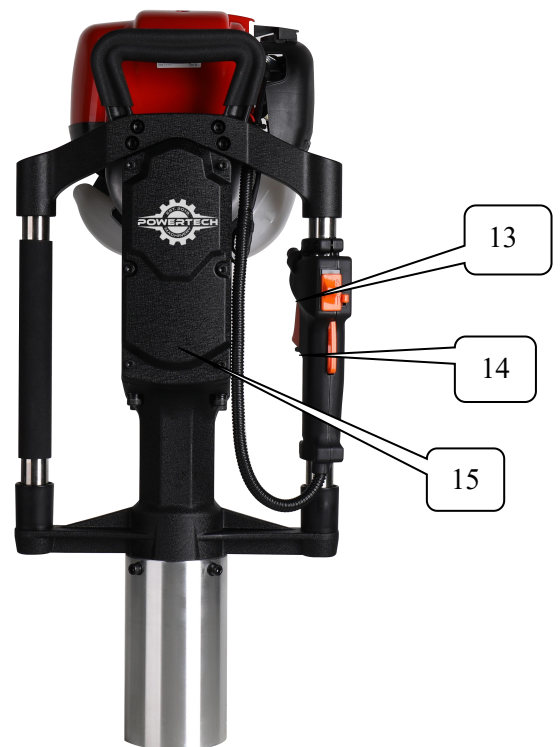


Fig. 2



Fig. 3

2. Description for Safe Operation

1. Operator must wear slip-resistant safety shoes and suitable clothing. He or she must wear safety glasses, hard hat, and ear protection.
2. While operating the machine be in a stable position and stand in front of Air Filter to operate. The operator shall not smoke, eat or chat while operating the machine.
3. After starting the machine, do not operate it with one hand.
4. When lifting the machine do not pulled the throttle button.
5. Non-staff shall be away from the operation area to avoid injuries.
6. Operate the post driver at the medium speed.
7. Keep the handle dry and clean from grease, oil or fuel mixture.
8. If operation needs to stop midway; be sure to turn off the engine.
9. Be sure to check whether throttle fastening screws of the connector are tight before use. If loose, tension the screws.
10. Prohibit the use of 2 stroke fuel, refer to Chapter 4.2 for recommended ratios of fuel.
11. Gasoline is highly flammable. Therefore, replenish fuel in a well-ventilated environment. During fuel filling, engine must be turned off.
12. Do not add too much fuel. The fuel shall not exceed the neck of the fuel tank. If fuel spills, do not start the machine until the machine and area is clean.
13. After refueling, tighten the fuel cap. During work, check fuel tank regularly for damage or leakage. If damage is found, shut down the machine immediately.
14. Reserve fuel needs to be stored away from any ignition source.
15. Post driver is NOT to be used in closed off areas such as tunnels, trenches or indoors, it's necessary to guarantee normal air circulation to avoid waste gas poisoning and suffocation.
16. Prevent quick acceleration or braking so as not to damage the machine.
17. Before transport, empty fuel inside the fuel tank to avoid leakage.
18. Non-qualified maintenance staff are prohibited from dismantling the post driver to avoid structural damage to parts, shortened service life or accidents.

3. Main Use and Function

3.1 Use: Post driving Star Pickets, Wooden Stakes and Posts.

3.2 Function

For optimal performance machine should be run at half to three-quarter throttle.

- 3.2.1 Engine-type handheld gasoline post driver which is light weight and low discharge capacity.
- 3.2.2 The product conforms to the design of man-machine engineering, reduces working strain of the operator to the greatest extent, and boasts simple and comfortable operation. The operator can achieve 360° all-around operation.
- 3.2.3 It can regulate impact energy and impact frequency and drive a variety of posts between 20-80mm (inclusive) in diameter.
- 3.2.4 Advantage: Save the trouble of using heavy machines such as generator, air compressor and manual post driving.
- 3.2.5 The operating handle of the machine is rubber and plastic sponge handle which can greatly reduce the recoil force of the machine. It's installed with two-way damping springs which makes for more comfortable use.

4. Preparation before Use

4.1 Post adapter and post sleeves

4.1.1 Install or change post sleeves. Select the corresponding retainer according to the sizes of the post, 45mm, 55mm, 73mm plastic sleeves. Insert plastic sleeves into 82mm adapter and then use retainer to secure.



Fig. 4

Warning:

Pounding posts that are significantly smaller than the adaptor or sleeve will result in instability while using post driver. This may result in injury to the operator and will result in damage to Post Driver. Ensure there is minimum distance on either side of the post so it fits neatly in the barrel. Where there is too much clearance on each side, use a smaller sleeve.

4.2 Fuel

4.2.1 The engine is stopped, add fuel in well-ventilated area away from any ignition sources.

4.2.2 If the engine has just been operated, wait for the unit to cool down before adding fuel.

4.2.3 Do not over-fill fuel tank. The fuel shall not exceed the neck of the fuel tank. If fuel spills, clean the area completely before starting the machine.

4.2.4 Tighten the fuel tank cap after refueling.

4.2.5 The machine uses unleaded fuel. (DO NOT USE 2 STROKE FUEL MIXTURE)

4.3 Engine Oil

4.3.1 To avoid damage to the engine, before starting check whether the engine oil is adequate or needs replacement; check engine oil level every 10hrs of operation.

4.3.2 The engine shall be placed horizontally. Unscrew the oil cap and check the oil level as shown in Fig.

5. If inadequate oil level, add to the upper limit. If oil is too dirty, carry out oil change.

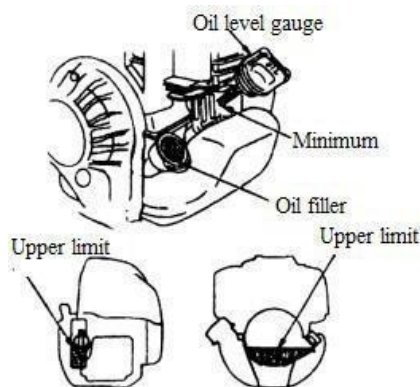


Fig. 5

4.3.3 The recommended environmental temperature of the machine is -15°C - 40°C. Recommend use of 4-stroke engine oil. SAE 10W-30 engine oil which equals to API classification SE, SF, and SG. Fig. 6 below is SAE Engine Oil Consistence Table.

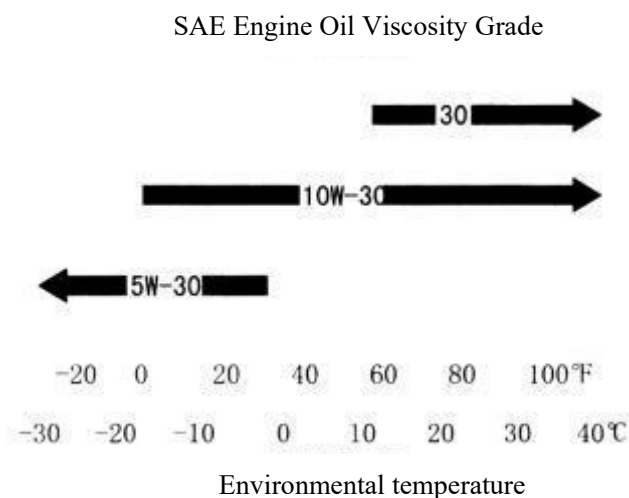


Fig. 6

4.4 Air Filter

4.4.1 Take apart the cover of the air filter and check whether filter element is clean. If not, clean it.

4.4.2 After the check, correctly install the cover of the air filter to its normal position.

5. Starting

5.1 Before starting the machine, press the priming bulb repeatedly until fuel can be seen in the the clear-plastic fuel tube. Approx. 5 pumps. (Control Choke. To start cold engine, move the choke lever in CLOSED position. Open air door after engine starts. To start warm engine, leave chock lever on OPEN position to open air door. as shown in Fig.7)



Fig. 7

- 5.2 Control and grip the top handle tightly with one hand while the other grabs the starting cable.
- 5.3 Do not let the starter cable go back freely, hold it tightly to avoid injury resulting from quick release.
- 5.4 Do not pull the handle of the starter during operation, since parts are rotating at high speed it may damage the starter.

6. Operation

6.1 When the engine has warmed up, press throttle button to the appropriate regulatory position according to the required impact energy.

Note: With a new gasoline post driver use shall mainly boast low to medium speed for the first 20 hours of operation and the maximum throttle shall not be used in order to extend the service life.

- 6.3. Operating speed of the gasoline engine shall be at medium speed.
- 6.4. High-speed operation of the post driver during non-post driving is prohibited and will damage the machine.
- 6.5. Ensure the post is in a vertical position and the post driver is on in a parallel plane to the post. The correct position as Fig.8.

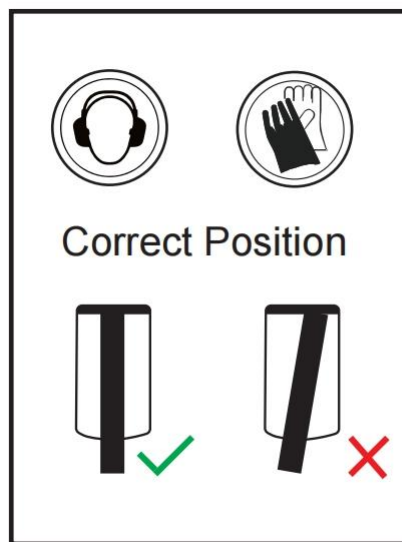


Fig.8

7. Turning off the Machine

7.1 Release throttle button and carry out idle running of the machine for 3-5 minutes.

7.2 Pull Stop Switch to the position of flame-out. See the position of Stop Switch in Fig.9.



Fig.9

8. Technical Maintenance

8.1 Air Filter

Check air filter regularly. Soot deposits blocking the filter element of the air filter will reduce power of engine and the service life. If the filter has too much soot deposit, clean it with warm water and detergent then wipe with a dry cloth and reinstall the air filter. Filter should be replaced if damaged. Particularly if in extreme environments of dust, maintenance cycle shall be shortened accordingly.

8.2 Fuel filter

If the fuel filter is blocked, the post driver will have reduced speed and weaker impact energy.

Method: ① Open the fuel cap. Get out the fuel filter from the fuel tank with metal hook and clean as required.

② When cleaning the fuel filter, clean the fuel tank at the same time.

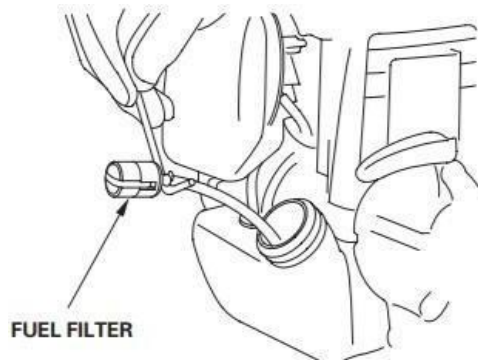


Fig.10

8.3 Carburetor

When the machine is not used for more than one week, be sure to completely drain fuel. Method:

Pull out the fuel inlet pipe, press rubber bubble repeatedly for fuel discharge, and press the fuel inlet pipe back into position when fuel is completely emptied.

8.4 Spark plug

To ensure normal operation of the engine, spark plug gap must be correct. Remove carbon sediment with a wire brush. Correct gap of spark plug is 0.6-0.7 mm. See Fig.11.

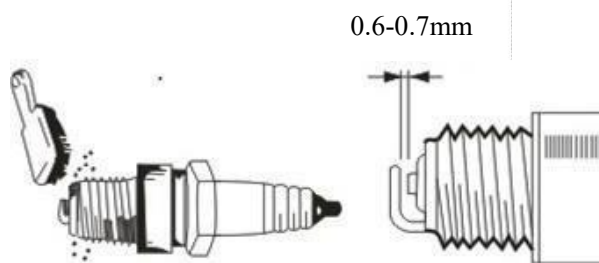


Fig.11

8.5 Muffler

Regularly remove dirt on inlet and outlet of the muffler, or clean with detergent.

8.6 The cylinder cooling fin

Regularly remove dust to ensure cylinder cooling. The gasoline post driver is air-cooling type. If dust accumulates on the cylinder cooling fin, the cooling effect will be influenced directly, which will lead to overheating and failure of the cylinder.

8.7 Engine oil replacement

8.7.1 Inadequate cleanliness of the engine oil will lower the service life of the engine. Replace the engine oil regularly and keep adequate amount of engine oil in the machine.

8.7.2 Engine oil replacement cycle: replace engine oil after 10 hours of the first use, and then replace every 6 months or after operating for 50 hours.

8.7.3 Drain the engine oil after running the machine for a short period (approx. 5mins) to ensure quick and thorough oil drainage.

8.7.4 Engine oil replacement steps:

- a. Make sure the oil cap is tight.
- b. Run the machine for a short period (Approx. 5 mins at idle)
- c. Put a drain tray beside the machine to hold the waste engine oil.
- d. Remove the oil cap, lean the engine towards the oil filler and dump the engine oil into the tray, as shown in Fig.12.

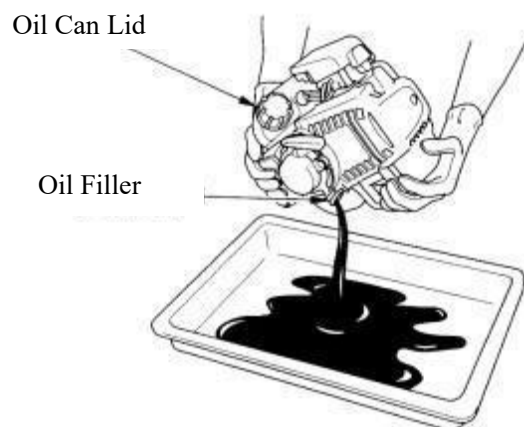


Fig. 12

e. Place the machine horizontally and add the recommended engine oil to the bottom edge of the oil filler.

For the correct amount of engine oil, refer to Fig. 5 in the above steps.

f. Add new engine oil after the residual oil is below 100mL. Add oil slowly to the bottom edge of the oil filler.

8.7.5 The recommended environmental temperature of the machine is -15°C - 40°C . Recommend use of SAE 10W-30 engine oil which equals to API classification SE, SF, and SG.

8.8 Filling of impact cylinder lubrication

After working for an accumulated 50 hours, uncover grease cap, then fill cylinder with approx. 50g of EP2 Grease. Refer Fig.13.



Fig. 13

9. Failure Analysis and Eliminating Methods

Diagnostics & Problem Solving

Example 1: Difficulties starting engine in cooling state

Check whether the spark plug is damp

→Clean and wipe dry the spark plug



Check whether the spark plug produces spark

→Replace the spark plug



Check if too much fuel has been supplied

→Let unit sit for 5mins, Reduce the fuel supply

Example 2: Difficulties restarting after a sudden stop

Check fuel level or if the carburetor is blocked

→Refill the fuel tank or clean the carburetor



Check if the fuel filter is blocked

→Clean or replace the fuel filter



Check amount of carbon deposit on the spark plug

→ Remove carbon deposit from the spark plug and clean the filter element

Example 3: Slow speed and weak power

Carbon deposit in the cylinder or muffler

→Remove carbon deposit



Check oil tube and or air intake is blocked

→Clean



Air filter is blocked

→Clean the filter

Example 4: Abnormal sound

Carbon deposit found in the combustion chamber

→Remove carbon deposit



Serious internal component failure

→Replace

Example 5: The machine is working normally but the work efficiency is very low

Rubber ring of the impact piston is aged and worn

→Replace

Please contact your local sales agent or dealer for further technical information.

10. Key Product Data

| | |
|--------------------|-----------------------------------|
| Engine Type | Original Honda GX35 OHC, 4-stroke |
| Model | PPD-80 |
| L×W×H (mm) | 695*300*273 |
| Fuel | Unleaded Petrol 90# or above |
| Oil Capacity | 0.1L |
| Fuel Tank Capacity | 0.63L |
| Weight | 14Kg |
| Max Torque | 1.6Nm@5500rpm |
| Displacement | 35.8CC |
| Max Power | 1kW@7000rpm |
| Fuel Consumption | 360g/KW.h |
| Impact Frequency | 800-1600BPM |
| Impact Energy | 15-45 J |
| Carburetor Type | Diaphragm-type |
| Spark Plug Type | Transistorized magneto |
| Starter System | Hand pull start |

11. Declaration of Conformity

We declare under our sole responsibility that our post driver conforms with following standards or standardization documents: in accordance to the regulation of directives 2006/42/EC, 2014/60/EU.

12. Warranty

Powertech Post Drivers are fitted with genuine Honda engines so please make sure you register the engine serial number with your local Honda dealer to claim the 3-year manufactures warranty.

The Powertech Post Driver unit comes with 12 months parts warranty. **Please note this only covers failures due to a manufacturing fault or defective part. Any damage or failure caused by operator abuse or misuse is not covered.**

13. Maintenance Cycle

Servicing & repairs are recommended to be carried out by an authorized dealer.

| | | | | | | | | |
|--|---|-------------|-------------------------|-------------------|------------|--------------------------|----------------------------|----------------------------|
| <p>The following data is given as a guide. Under severe working conditions such as dusty environments or extended working hours, maintenance cycle should be shortened accordingly. Please also refer to the Honda Service Manual supplied for technical information on the engine.</p> <p>Contact your local sales agent or dealer for further technical information.</p> | | Before work | After work or every day | After Filling oil | Every Week | 50hr Service or 6 months | 100hr Service or 12 months | 300hr Service or 24 months |
| The whole machine | Complete Check (condition, screw/bolt tensions, Throttle & cut out switch) | √ | | √ | | √ | √ | √ |
| | Clean | | √ | | | √ | √ | √ |
| Timing Belt | Check | | | | | | | √ |
| Air filter | Clean | | | | √ | | | |
| | Replace | | | | | | √ | √ |
| Fuel filter | Clean | | | | | | √ | |
| | Replace | | | | | | √ | |
| Valve Clearances | Check/Adjust | | | | | | | √ |
| Grease gearbox/impact Cylinder (EP0) | Clean | | | | | √ | | |
| | Add grease | | | | | | | √ |
| Muffler | Check | | | | | √ | | |
| | Remove carbon deposit | | | | | | | √ |
| Cylinder cooling fin | Check | | | | | √ | | |
| | Clean | | | | | | | √ |
| Spark plug | Check/Adjust the distance between electrodes | | | | | | √ | |
| | Replace | | | | | | | √ |
| Engine Oil (30, 10W30) | Check | √ | | √ | √ | | | |
| | Replace | | | | | √ | √ | √ |

14. Parts List and Exploded View of PPD-80 Post Driver

Parts highlighted in yellow are wear and tear items

| No. | Description | Qty.s | No. | Description | Qty.s |
|-----|--|-------|-----|---------------------------------|-------|
| 901 | M5X25 Hexagon socket screw, spring, flat pad combination | 2 | 931 | Piston | 1 |
| 902 | M5X30 Hexagon socket screw, spring, flat pad combination | 4 | 932 | O Ring 37.3*44.3*3.5 | 3 |
| 903 | Gear box cover | 1 | 933 | guide tube | 2 |
| 904 | Shaft ring Φ17 | 1 | 934 | Auxiliary hammer | 1 |
| 905 | Circlip for hole Φ40 | 1 | 935 | handle | 1 |
| 906 | Bearing 6203 | 3 | 936 | Tubular handle | 1 |
| 907 | No.2 gear | 1 | 937 | Switch block | 1 |
| 908 | Middle axle | 1 | 938 | Cylinder | 1 |
| 909 | No.1 gear | 1 | 939 | Damping spring | 4 |
| 910 | M6X20 Hexagon socket head screw, spring pad combination | 4 | 940 | Spring cover | 2 |
| 911 | M6X25 Hexagon socket head screw, spring pad combination | 2 | 941 | Front placket | 1 |
| 912 | Bearing 6202 | 2 | 942 | M8X55 hexagon socket cap screws | 2 |
| 913 | Gear box | 1 | 943 | M8X45 hexagon socket cap screws | 6 |
| 914 | Up handle | 1 | 944 | Auxiliary hammer retaining ring | 1 |
| 915 | Seal cartridge Φ18.8*15-4 | 1 | 945 | O ring W50*5.7 | 1 |
| 916 | M6X20 hexagon socket cap screws | 1 | 946 | Retainer ring for punch hammer | 1 |
| 917 | Clutch drum | 1 | 947 | O-ring for punch hammer F28*3.7 | 2 |
| 918 | 4-stroke engine | 1 | 948 | Punch hammer | 1 |
| 919 | Grease cap | 1 | 949 | O-ring W50*3.1 | 1 |
| 920 | O ring 60*1.8 | 1 | 950 | Metal head | 1 |
| 921 | M6X20LH hexagon socket cap screws | 1 | 951 | Φ8 spring washer | 12 |
| 922 | Clip board for connecting rod 6.5*30-2 | 1 | 952 | Spacer washer 28*15.5-2 | 1 |
| 923 | Eccentric shaft | 1 | 953 | Impactor | 1 |
| 924 | Cylinder retaining ring | 1 | 954 | M6X16 Hexagon socket head screw | 4 |
| 925 | O ring 80*76-2 | 1 | 955 | Adapter 80mm | 1 |
| 926 | Spacer 17-22-12.3 | 1 | 956 | Piling sleeve 20-45mm | 1 |
| 927 | No.3 gear | 1 | 957 | Piling sleeve 55mm | 1 |
| 928 | Needle bearings NK15/16 | 1 | 958 | Piling sleeve 73mm | 1 |
| 929 | Connecting rod | 1 | | BMC case | 1 |
| 930 | cylinder pin ø10*43 | 1 | | | |

